



Lance Aircraft Supply, Inc.

Manuals Available:

Manual Type	Aircraft/Application	Number
Description & Maintenance Instructions	Harvard 2, 2A, & 4	E.O. 05-55A-2
Erection & Maintenance Instructions (Color)	AT6, SNJ, Harvard 2A & 3	AN 01-60F-2
Erection & Maintenance Instructions	T-6 (SNJ-3,-4,-5,-6)	AN 01-60F-2
Erection & Maintenance Instructions	T-6G & LT-6G	T.O. 1T-6G-2 (formerly AN01-60FFA-2)
Flight Handbook	AT-6D	AN 01-60FFB-1
Flight Manual	T-28B,C	01-60FGB-1
Flight Manual	T-34A	T.O. 1T-34A-1
Flight Operating Instructions	AT-6C, D (SNJ-4,-5)	AN 01-60FE-1
Flight Operating Instructions	AT-6D, F (SNJ-5,-6)	AN 01-60FF-1
Flight Operating Instructions	AT-6G	T.O. 1T-6G-1
Flight Operating Instructions	T-6F/SNJ-6	AN 01-60FFC-1
Flight Training – Aerobatics	T-6	SAAF – Chapter 17
Flight Training Instructions	SNJ	
Pilot's Operating Instructions	Harvard 2,2A,4	E.O. 05-55A-1
Pilot's Operating Instructions	BT-13A, SNV-1	T.O. 01-50BC-1
Pilot's Operating Instructions	BT-13B, SNV-2	AN 01-50BD-1
Inspection Requirements	T-6	T.O. 1T-6C-6
Parts Catalog	Harvard 2, 2A & 4	E.O. 05-55A-4
Parts Catalog	AT-6C, SNJ-4	T.O. 01-60FE-4
Parts Catalog	BT-13A,BT-15,SNV-1	AN 01-50B-4
Parts Catalog	T-6D & T-6F (SNJ-5,-6)	AN 01-60FF-4
Parts Catalog	T-6G & LT-6G	AN 01-60FFA-4
Parts Catalog	NA-64 Yale	NO. 1707
Structural Repair Instructions	BT-13A,BT-15,SNV-1	AN 01-50B-3
Service Instructions	BT -13A,BT-15	T.O. 01-50BB-2
Weight & Balance Data	Harvard 4M	NO. 45-0008
Weight Check List & Loading Data	T-6C,D,F,G <-6G	T.O. 01-60F-5
R-1340 Parts Catalog	Pratt & Whitney	
R-1340 Overhaul Manual	Pratt & Whitney	
Service Instructions	R-1340	AN 02-10DC-2
Overhaul Instructions	R-1340	T.O. 2R-R-1340-3
Operation, Service & OH Instructions	12D40,2D30,2B20, 2E40,3D40,3E50	T.O. 3H4-2-1